# INSTALLATION INSTRUCTIONS



#### WINCH MOUNT LICENSE PLATE RELOCATOR

**APPLICATION:** 


For Use With All Hawse Fairlead Winches

**PART NUMBER:** 

46-20065

CONTENT			
ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	1	LICENSE PLATE MOUNT	10MM SOCKET
2	1	FAIRLEAD MOUNT PLATE	10MM WRENCH
3	2	M6 NYLON SPACER	RATCHET
4	2	SHORT M6 BUTTON HEAD BOLT	TORQUE WRENCH
5	2	LONG M6 BUTTON HEAD BOLT	
6	8	M6 FLAT WASHER	
7	2	M6 SPLIT LOCK WASHER	
8	2	M6 HEX NUT	
9	2	M6 NYLOCK NUT	

# ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING

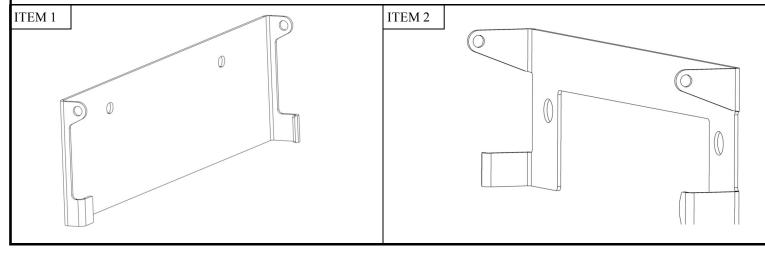


#### **PROCEDURE**


1. Remove contents from box, verify if all parts listed are present and free from damage. Carefully read and understand all instructions before attempting installation.

Failure to identify damage before installation could lead to a rejection of any claim.

- 2. Remove the fasteners attaching the fairlead to the winch tray.
- 3. Slip the Tray Side Mounting Bracket between fairlead and the winch tray. Re-attach the fairlead using the fairlead manufacturer's hardware. Adjust the fairlead and Tray Side Mounting Bracket as necessary then torque the fairlead hardware per the fairlead manufacturer's instructions. See Figure 1

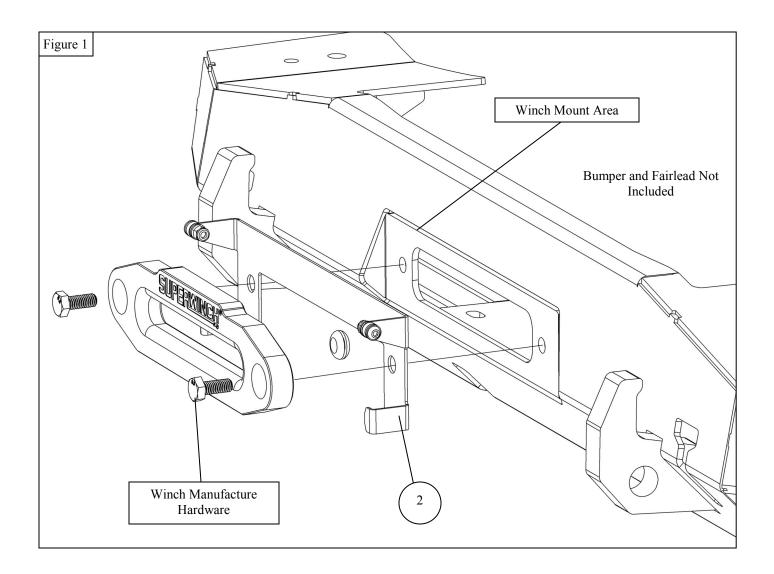

4. Insert the Nylon Spacers between the Tray Side Mounting Bracket and the License Side Mounting Bracket. Loosely attach the License Side Mounting Bracket to the Tray Side Mounting Bracket using the supplied M6 hardware. **See Figure 2.** 

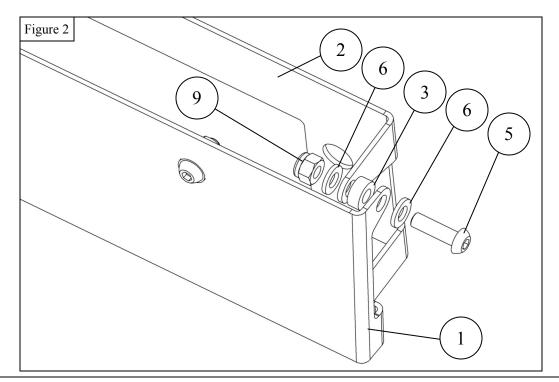


- 5. Check the swivel movement of the License Side Mounting Bracket. Tighten the M6 Nylock Nuts as necessary in order to create some resistance while allowing the bracket to swivel. The resistance will help maintain the License Side Mounting Bracket in the vertical position during winching. **Note: Do not Over tighten!**
- 6. Install the vehicle's license plate using the supplied M6 hardware (4, 6-8).
- 7. Check the operation of the unit. The hooks on the passenger side of the bracket should lock when pushed in the down position. To unlock push in on the front of the License Side Bracket while simultaneously pulling on it's side.



#### CARE INSTRUCTIONS

- REGULAR WAXING IS RECOMMENDED. DO NOT USE ANY TYPE OF POLISH OR WAX THAT MAY CONTAIN ABRASIVES.
- STAINLESS STEEL PRODUCTS CAN BE CLEANED WITH MILD SOAP AND WATER. STAINLESS STEEL POLISH SHOULD BE USED TO POLISH SMALL SCRATCHES.
- GLOSS BLACK FINISHES SHOULD BE CLEANED WITH MILD SOAP AND WATER.







# **WARNING**



Failure to follow these instructions could lead to death, personal injury, and / or property damage.

Failure to follow these instructions could lead to death, personal injury, and / or property damage.

## **FASTENERS**:

All Westin supplied fasteners must be utilized and installed in accordance with the installation instructions and apply torque to the specifications as defined. DOUBLE CHECK ALL FASTENERS BEFORE INITIAL USE, AND PERIODICALLY IN THE FUTURE TO ENSURE PROPER FUNCTION AND SAFETY.

### **DRILLING:**

Most Westin products do not require drilling for installation. If drilling is defined as required, use caution when drilling a vehicle. FAILURE TO REVIEW AN AREA TO BE DRILLED MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.

## **EYE PROTECTION:**

ALWAYS WEAR SAFETY GLASSES OR GOGGLES DURING THE INSTALLATION PROCESS TO AVOID PERSONAL INJURY.

# **MAXIMUM TOWING/CARRYING CAPACITY**: (if applicable)

The Westin Receiver Hitches will have a visible tow rating label affixed directly on the product. User should never exceed the vehicle manufacturers maximum tow and weight rating regardless of the capacity of the hitch. FAILURE TO FOLLOW THESE GUIDELINES WILL VOID THE WESTIN WARRANTY AND MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.

## FOR CALIFORNIA RESIDENTS ONLY-PROP 65 WARNING:

Some products may contain chemicals such as DEHP, which can cause cancer, birth defects or other reproductive harm. For more info go to www.p65warnings.ca.gov