

INSTALLATION INSTRUCTIONS



Mesa Roof Rack

APPLICATION:


Mesa Roof Rack Extension for Mesa Roof Rack 15-00025

2019-2023 Mercedes-Benz Sprinter Van 170" Wheel Base

PART NUMBER: 15-00085

CONTENT			
ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	2	RAIL EXTENSION	
2	2	RAIL LINK BRACKET	5MM ALLEN WRENCH
3	2	RAIL SUPPORT LINK BRACKET	4MM ALLEN WRENCH
4	16	M6 SLIDE NUTS	
5	16	M6 BUTTON HEAD SCREW	
6	16	M6 SPLIT LOCK WASHER	
7	16	M6 FLAT WASHER	
8	4	M8 BUTTON HEAD SCREW	
9	4	M8 FLAT WASHER	
10	4	M8 SPLIT WASHER	
11	4	M8 SQUARE NUT	


ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING

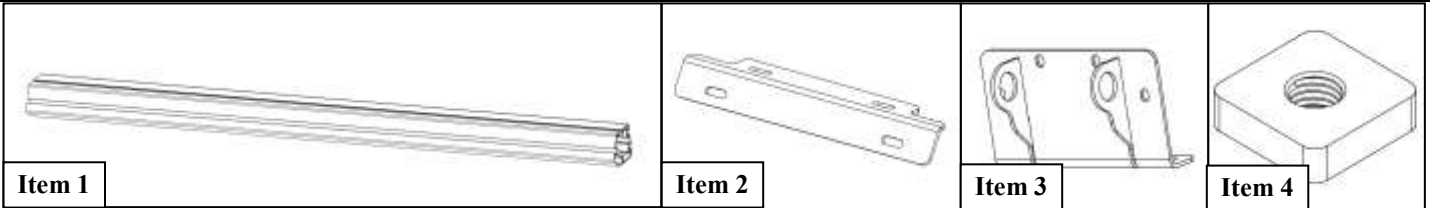

PROCEDURE

- Remove contents from box, verify if all parts listed are present and free from damage. Carefully read and understand all instructions before attempting installation.
Failure to identify damage before installation could lead to a rejection of any claim.
- Locate and slide **10x** M8 Square Nut Plates (**Item 11**) through the Driver and Passenger side roof rail spaced evenly.
- Slide M6 Slide Nuts into the extensions as needed, using install instructions from 15-00025 as a reference.
- Using brackets items 2, 3, and hardware items 5-10 (M6 and M8 hardware) install extensions (1) between front and rear rails for Mesa Rack 15-00025 for the 2019-2023 Mercedes-Benz Sprinter. Figure 1. Use install instructions from 15-00025 as a reference.
- Proceed to this installation in conjunction with the 15-00025 Mesa Roof Rack installation instructions.**

Figure 1

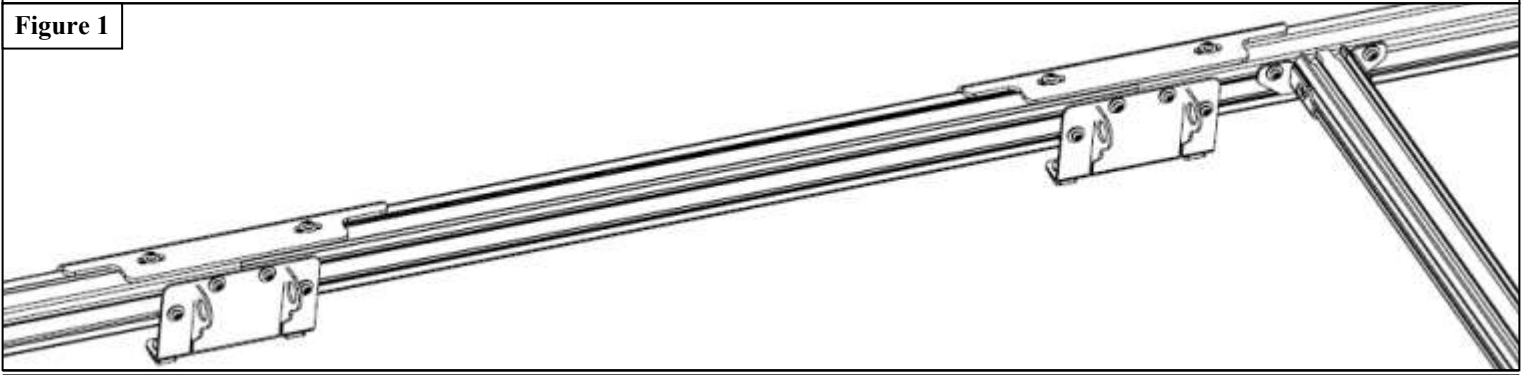

INSTALLATION COMPLETE



CARE INSTRUCTIONS

- REGULAR WAXING IS RECOMMENDED. DO NOT USE ANY TYPE OF POLISH OR WAX THAT MAY CONTAIN ABRASIVES.
- STAINLESS STEEL PRODUCTS CAN BE CLEANED WITH MILD SOAP AND WATER. STAINLESS STEEL POLISH SHOULD BE USED TO POLISH SMALL SCRATCHES.
- GLOSS BLACK FINISHES SHOULD BE CLEANED WITH MILD SOAP AND WATER.



Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773

Thank you for choosing Westin products
for additional installation assistance please call
Customer Service (800) 793-7846
www.westinautomotive.com



WARNING



Failure to follow these instructions could lead to death, personal injury, and / or property damage.

Failure to follow these instructions could lead to death, personal injury, and / or property damage.

FASTENERS:

All Westin supplied fasteners must be utilized and installed in accordance with the installation instructions and apply torque to the specifications as defined. **DOUBLE CHECK ALL FASTENERS BEFORE INITIAL USE, AND PERIODICALLY IN THE FUTURE TO ENSURE PROPER FUNCTION AND SAFETY.**

DRILLING:

Most Westin products do not require drilling for installation. If drilling is defined as required, use caution when drilling a vehicle. **FAILURE TO REVIEW AN AREA TO BE DRILLED MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

EYE PROTECTION:

ALWAYS WEAR SAFETY GLASSES OR GOGGLES DURING THE INSTALLATION PROCESS TO AVOID PERSONAL INJURY.

MAXIMUM TOWING/CARRYING CAPACITY: (if applicable)

The Westin Receiver Hitches will have a visible tow rating label affixed directly on the product. User should never exceed the vehicle manufacturers maximum tow and weight rating regardless of the capacity of the hitch. **FAILURE TO FOLLOW THESE GUIDELINES WILL VOID THE WESTIN WARRANTY AND MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

FOR CALIFORNIA RESIDENTS ONLY-PROP 65 WARNING:

Some products may contain chemicals such as DEHP, which can cause cancer, birth defects or other reproductive harm. For more info go to www.p65warnings.ca.gov



Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773